



# Einhell



**FREELEXO+**

**SERVICE**  
<http://qr.einhell.com/179a044c>



**1**

Step 1: Unboxing and assembly. The diagram shows the device being removed from its packaging. The box is shown with dimensions: 30 cm height for the top flap, 10 cm for the main body, and 0 for the base. The device is shown with its components: a red cable, a battery pack, and a control unit. The device is shown being assembled onto a base. The diagram also shows the device being used to cut a cable, with a warning not to cut near trees or other obstacles. The maximum cutting depth is indicated as max. 60 mm.

**2**

Step 2: Usage instructions. The diagram shows the device being used in a house, a garage, and outdoors. It shows the maximum distance from a power source (max. 10 m) and the maximum length of the cable (>2m). The diagram also shows the device being used to cut a cable, with a warning not to cut near trees or other obstacles. The maximum cutting depth is indicated as max. 60 mm.

**3**

Step 3: Safety and operation details. The diagram shows the device being used in various situations: cutting cables near buildings, trees, and power lines. It shows the maximum distance from a building (>30 cm) and the maximum distance from a tree (>30 cm). The diagram also shows the device being used to cut a cable, with a warning not to cut near trees or other obstacles. The maximum cutting depth is indicated as max. 60 mm.

